

MOLDEX[®]
Ideas that wear well.™

EZ-ON[®] Series

PARTICULATE RESPIRATORS

The first and only NIOSH N95 approved adjustable one strap respirator.

Easy on, easy off one strap design for a quick fit.

One strap with FLEXWING™ and head harness provides an easier and more comfortable fit than two straps.


Elastic cloth strap is adjustable for a cool, custom fit.

Outer Dura-Mesh® shell keeps filter media cleaner looking longer.

Dura-Mesh® inner shell resists collapsing in heat and humidity.

Ventex® valve lets the hot air out faster so workers breathe easier and stay cooler.

Soft foam nose cushion for added comfort.

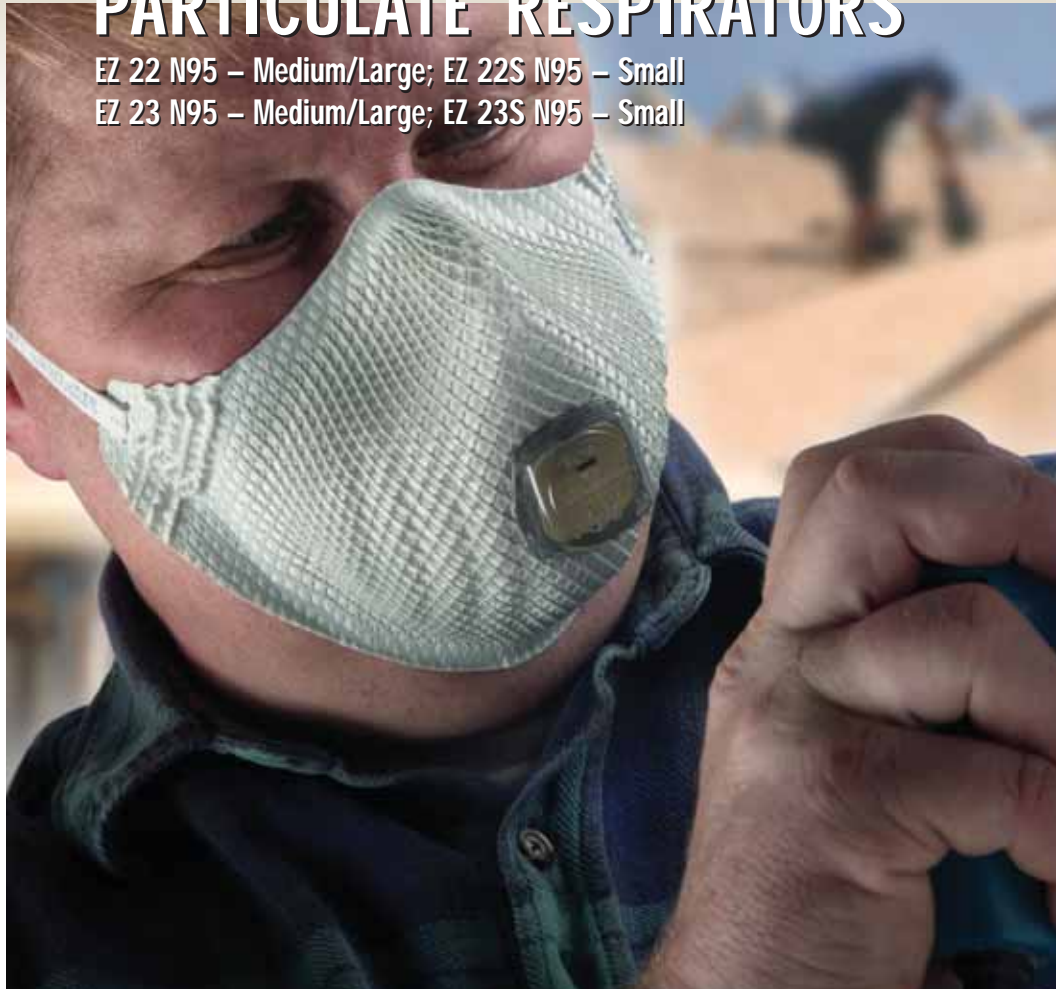

EZ 22 N95 – Medium/Large; EZ 22S N95 – Small
EZ 23 N95 – Medium/Large; EZ 23S N95 – Small



EASY ON, EASY OFF.

The first and only NIOSH N95 approved adjustable one strap respirator gives you a quick fit. The one strap with FLEXWING™ and head harness provides an easier and more comfortable fit than two straps. The adjustable cloth strap is cool and comfortable against the skin.

DURA-MESH® SHELL LASTS LONGER.

Twin Dura-Mesh® shells surround shield and protect the filter media, so it stays cleaner looking longer. Plus it resists collapsing, even in heat and humidity. So the respirator holds its shape longer. The result is fewer respirators used and lower costs.

VENT HOT AIR, STAY COOLER.

Exclusive Ventex® valve lets the hot air out faster. So breathing resistance is reduced and workers stay cooler.

N95 NON-OIL PROTECTION.

NIOSH certified under 42CFR84 regulations to have a filter efficiency level of 95% or greater against non-oil based particulate aerosols up to 10 X PEL.

MOLDEX TECHNICAL SERVICE.

Moldex provides a Toll-Free Technical Help line. Just call 800/421-0668 ext. 550 or 310/837-6500 ext. 550 or contact us at www.moldex.com.

N95 PARTICULATE RESPIRATORS

EZ-ON[®] Series

PARTICULATE RESPIRATORS

APPLICATIONS:

⚠ WARNING TO USER:

Follow all instructions and warnings on the use of this respirator. Failure to do so will reduce respirator effectiveness, wearer protection and may result in sickness or death.

Before use, the user must first be trained by the employer in proper respirator use, in accordance with applicable safety and health standards, for the contaminant and exposure level in the assigned work area.

The particulates and other contaminants which can be dangerous to your health include those which you cannot see, taste, or smell.

This product has not been sold with warnings or use instructions for personnel involved in healthcare or related situations, where there may be the possibility of contact with disease or biological hazards. If you are considering such uses, first call the Moldex Technical Service Dept., 310/837-6500 ext. 550 or 800/421-0668 ext. 550.

USE AGAINST:

1. Particulate aerosols free of oil.

DO NOT USE AGAINST:

1. Concentrations of contaminants which are unknown, or are immediately dangerous to life or health.
2. Concentrations of particulates which exceed the maximum use concentration or 10 times the OSHA Permissible Exposure Limit, whichever is lower.
3. Gases, vapors, asbestos, paint spray, sandblasting or particulate materials which generate harmful vapors.
4. Oil-based mists.

RESTRICTIONS:

1. This respirator does not supply oxygen and must not be used in atmospheres containing less than 19.5% oxygen.
2. Do not remain in contaminated area if any physical distress occurs, for example breathing difficulty, dizziness or nausea.
3. Leave contaminated area and replace respirator if it is damaged, distorted, a proper fit can not be obtained or breathing becomes difficult.
4. Do not alter, modify, or abuse this respirator.
5. Store unused respirators in bag in a clean, dry, non-contaminated area.
6. Dispose of respirator, according to your employer's policy and local regulations.
7. Dispose no later than thirty days after first use.
8. Use respirator before the "use by" expiration date printed on bag.


MOLDEX-METRIC, INC.

10111 W. Jefferson Blvd.
Culver City, CA 90232
800/421-0668 310/837-6500
FAX 310/837-9563


www.moldex.com e-mail: sales@moldex.com
Moldex, Dura-Mesh, Ventex and EZ-ON are registered trademarks.
The Mesh Design is a trademark of Moldex.
U.S. Patents #D285,374, #4,850,347, #4,384,577, #6,571,797.
Made in the U.S.A. 9702-712 REV D 9/05



APPROVAL



**MOLDEX/METRIC
INCORPORATED**
CULVER CITY, CALIFORNIA, U.S.A.



THESE RESPIRATORS ARE APPROVED ONLY IN THE FOLLOWING CONFIGURATIONS:

| TC | PROTECTION ¹ | RESPIRATOR | | | | | CAUTIONS AND LIMITATIONS ² |
|----------|-------------------------|------------|--------|--------|--------|--------|---------------------------------------|
| | | E Z | E Z | E Z | E Z | E Z | |
| 84A-3743 | N95 | X | X | | | | A B C J M N O P |
| 84A-3846 | N95 | | | X | X | | A B C J M N O P |

1. Protection

N95-Particulate Filter (95% filter efficiency level) effective against particulate aerosols free of oil; time use restrictions may apply

2. Cautions and Limitations

A- Not for use in atmospheres containing less than 19.5 percent oxygen.
 B- Not for use in atmospheres immediately dangerous to life or health.
 C- Do not exceed maximum use concentrations established by regulatory standards.
 J- Failure to properly use and maintain this product could result in injury or death.
 M- All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA, and other applicable regulations.
 N- Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configuration as specified by the manufacturer.
 O- Refer to User's Instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
 P- NIOSH does not evaluate respirators as surgical masks.

TECHNICAL HELP LINE

For information, technical assistance, and training materials call 800/421-0668 ext. 550 or 310/837-6500 ext. 550.

PACKAGING

| | |
|--------------------------|--------------------------|
| EZ 22/EZ 22S N95 | EZ 23/EZ 23S N95 |
| 10 Respirators per Bag | 10 Respirators per Bag |
| 20 Bags per Case | 10 Bags per Case |
| 200 Respirators per Case | 100 Respirators per Case |

LIMITED WARRANTY

IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. Exclusive Remedies: damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damage, or liability, direct, indirect, incidental, special, or consequential, arising out of sale, use, or misuse, or the inability to use products by the user.

DISTRIBUTED BY:

In Canada:

Pacesetter Sales & Associates
20 Arthur Hall Drive
Sharon, ON LOG 1V0
Tel: 905/478-8042 Fax: 905/478-8010
www.pacesettersales.com